

power cord or adapter. Avoid cable clutter and keep the power cord and adapter away from children.

**Usage and storage** - The appliance may not be used or stored in a place with risk of frost (5 plus Celsius) or heat (above 35 plus Celsius).

**Disposal and recycling information** - This package can be 100% recycled. Follow your local recycling regulations when disposing of the package. Packing materials (plastic bags, polystyrene parts, etc) are to keep away from children due to potential danger.

**Declaration of conformity** - This product is CE-marked and has been manufactured in accordance to low voltage directive. The safety of this appliance can only be guaranteed when it is connected and used in a correct way according to the safety information in this manual.

## **SAFETY INFORMATION**

Important information for safe operating procedures.

Read this safety information carefully in order to avoid personal and/or material damage. Study the instruction manual in its entirety before you install and start up the appliance. The manufacturer can not be held responsible for an incorrect installation and/or non-intended usage.

**Intended use** - This appliance is only intended for household use and may only be used indoors only. The appliance is not intended for professional use. Avoid dirty/or environment that contains inflammable gas fragment.

**Unauthorized users** - This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.

**Placement** - The cables shall be drawn in a way that doesn't infringe any person or property damage, e.g. due to falling or stumbling. Leave enough space around and over the appliance so that air can circulate freely. Do not cover or put the appliance in a close compartment. Coverage of the appliance can lead to overheating and cause fire. Never place the appliance close to an open fire, near heat sources or other surroundings that has similar environment. Head of appliance (black triangular emitter) cannot be touched at anytime. The appliance should not be placed in an environment that has a temperature under 5 or over 35 plus Celsius.

**Moisture and water** - Never use the appliance in damp areas or near a sink, wash stand, bathtub, shower, etc. Never touch the black triangular emitter with wet hands. To switch off the electrical current, just unplug.

**Unauthorized objects or fluids** - Fluids and/or objects must not enter the appliance. If fluids or objects do get inside, immediately disconnect the power (unplug) and let our professional workshop examine the product.

Clean the product regularly. Do not use grinding sponges or detergents (e.g. acetone) to clean the appliance, use vinegar 12%. A soft tissue that do not lint may be used for cleaning.

**Broken or fault appliance** - Never use the product if it or the power cord, plug or adapter has been damaged in any way or doesn't work as intended. Repairing, such as disassembling and/or reassembling the appliance, is only allowed to skilled professionals. By repairing it yourself you will lose all warranties and a risk of electric shock and short circuit. The manufacture can not be held responsible for the continues safety of the appliance if instructions have been made by the user.

**Power cord and adapter** - If the power cord or adapter is damaged, it must be replaced by a genuine product or adapter supplied by the manufacturer. Protect and place the power cord and adapter so that it can't be stepped upon jammed in any way. The power cord or adapter must never touch wet or warm surfaces. Never put heavy object or object with sharp edges on the power cord or adapter. Avoid cable clutter and